





BOLTZ CD & MULTIMEDIA RACK ASSEMBLY INSTRUCTIONS

Boltz Steel Furniture | 235 Tilk Rd | Conway, AR 72032 | 877.804.7650 | info@boltz.com


Overview (see below for detailed instructions on each step): Start by threading a hex nut onto ONE SIDE of every rod. Next, take one of your end panels, lay it on its long edge on the ground, and begin putting the rods through the holes and securing them with acorn nuts - ONLY FINGER TIGHTEN the acorn nuts at this time. Once all the rods are attached to that end panel, you can lay it flat so that the rods are pointing up. Put a slider/divider on to each tier then thread on hex a nut onto all the rods. CAREFULLY place the other end panel onto the rods that are sticking up and start to guide the rods into the holes. As you get a rod through a hole place an acorn nut on the rod and make ONE HALF TURN. This will keep the rod from slipping out of the hole. Again, be careful not to scratch the end panel with the rods. Once you have all the rods through and an acorn nut on each rod, stand the rack up and hand tighten all the hardware. Congratulations, you are finished with assembly!

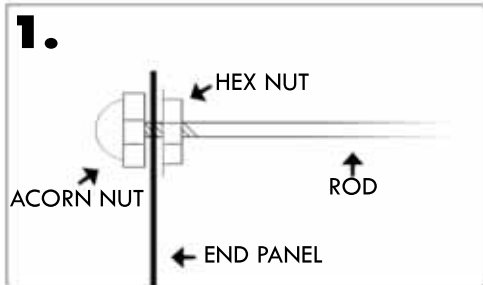

STEP 1. Start by threading a hex nut onto one end of all the rods. The more narrow part of the hex nut should be toward the center of the rod so that the wider, flat part will face the outside edge of the rod. Now, insert a rod through a hole in the side panel, then hand tighten an acorn nut onto the threads of the rod that came through. Repeat until all the rods are attached. Only hand tight at this point.

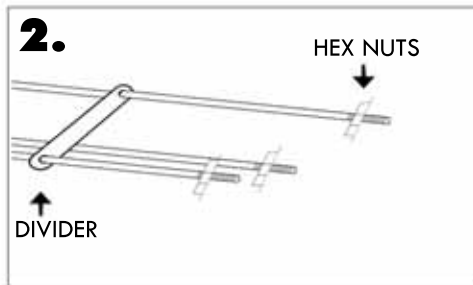

STEP 2. At this point you find it helpful to flip the rack so that the side panel is flat on the ground and the rods are pointing up toward the ceiling. Insert the black rubber grommets into the holes of the dividers and slide one divider onto each tier using the front and back rods. Then attach a hex nut to the end of each rod. Again, the wider flat part of the nut will face the outer edge - and only hand tighten.

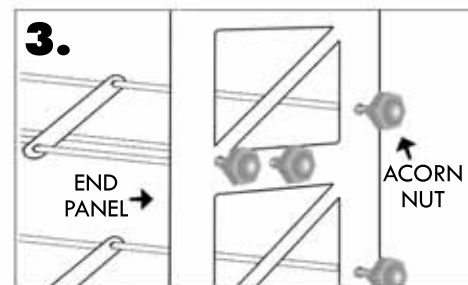

STEP 3. And this is the tricky part... Carefully lay the other side panel on top of the rods. Start at one end of the rack and work the rods through the holes one at a time. Once you get a thread to show through, even if it is just the tip, put the outer acorn nut on it and tighten it half a turn. Continue this until you have all the rods through and the acorn nuts attached.



Shown here: MM-252
These instructions cover assembly for all Boltz floor standing racks.

ACCESSORIES:

Optional feet: Bolt on to the outside of the rack using the rods on the bottom tier.

Rubber floor protectors (2 sizes): The large protectors fit on the edges of the optional feet. The small protectors fit directly onto the bottom edge of the rack. If you are using the feet, you will not need to apply the small protectors that go onto the rack.

Optional wall stabilizer bracket: Remove the acorn nut from the back or middle rod on the top tier of your rack. Slide the fork of the bracket over the rod, adjust the depth of the bracket so that it is flush with the wall, then replace the acorn nut over the bracket and tighten to hold bracket in place. Insert the screw through the hole in the bracket and secure to wall. Note: This bracket is not meant to mount the rack to the wall, only to give extra stability to the rack.

INCLUDED HARDWARE:

(Extra pieces of most parts included)

